



3-5-96

TO: FAMILY SIZZLER OWNERS

RE: OPERATOR'S MANUAL UPDATE
PAGE 12
EMERGENCY PROCEDURES

REPLACE THE ENCLOSED PAGE OF YOUR FAMILY
SIZZLER MANUAL DUE TO A TYPOGRAPHICAL
ERROR.

FAMILY SIZZLER EMERGENCY PROCEDURES

PROBLEM:

Unusual noises.

Ride will not stop.

ACTION:

Stop ride (release rotation button).

Release rotation button.

Push red stop button.

Turn off key.

Turn off main electrical-disconnect
at rear of control stand.

Ride will coast to stop in
approximately 1 1/2
rotations.

Procedure explained.

Let go off rotation button:

Large red palm button:

Turn off key:

Turn off main electrical
disconnect:

This will turn off drive motors.

Cuts off power to drive motor contact or coil.

Cuts off power to drive motor contact or coil.

Shuts off power to ride.



March 14, 1997

RE: FAMILY SIZZLER/TWIZZLER

It is imperative that the lap bars be checked after all the passengers are loaded to be sure they are down in the customer's lap. We have had one instance where the lap bar was not pushed down in the passengers lap and the child climbed out of the seat during operation.

Due to the seriousness of this, we would like to have you make sure that you operators understand that the ride must be operated in a professional manner, being very conscious of watching the passengers while they are riding the ride and make sure the lap bar is pressed down into their lap. If any passenger tries to get out, **STOP THE RIDE.**

Thank you very much in your assistance in this.

Sincerely,

Victor Wisdom
Vice President
Wisdom Industries