

MOSER RIDES SRL

Manufacturers and sellers of quality Amusement Rides
Via Abetone Brennero – 46035 Ostiglia (Mn) Italy
Tel. ++39 386 800001 Fax ++39 386 802099
Email: moser@moserrides.com

SPRING RIDE

PROCEDURE FOR MAINTENANCE OF THE HARNESS LIMIT SWITCHES

To get that all harness limit switches are activated at the third click proceed as follow:

1. Close all the handles except that you need to adjust
2. Close this handle until the third click
3. Check on the operator console if the signal lamp " SAFETY BARS CLOSED " is power ON

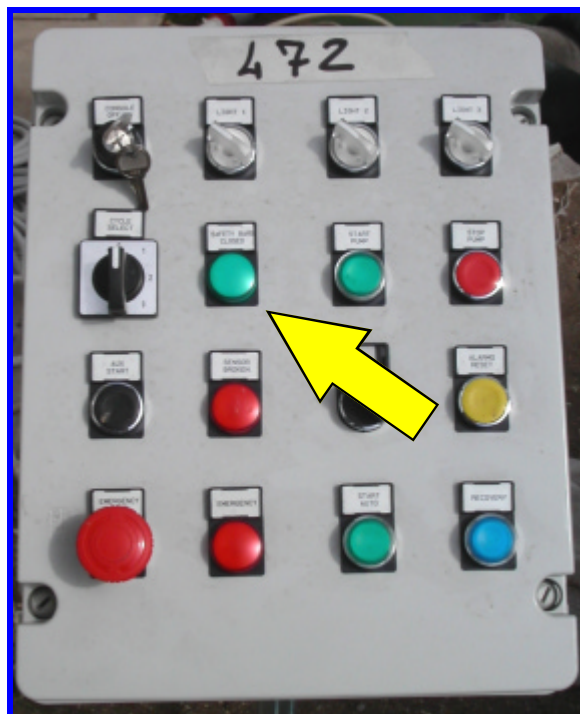


Fig. 1: Safety bars closed signal lamp


MOSER RIDES SRL

Manufacturers and sellers of quality Amusement Rides
Via Abetone Brennero – 46035 Ostiglia (Mn) Italy
Tel. ++39 386 800001 Fax ++39 386 802099
Email: moser@moserrides.com

SPRING RIDE

PROCEDURE FOR MAINTENANCE OF THE HARNESS LIMIT SWITCHES

If instead the signal lamp stays out

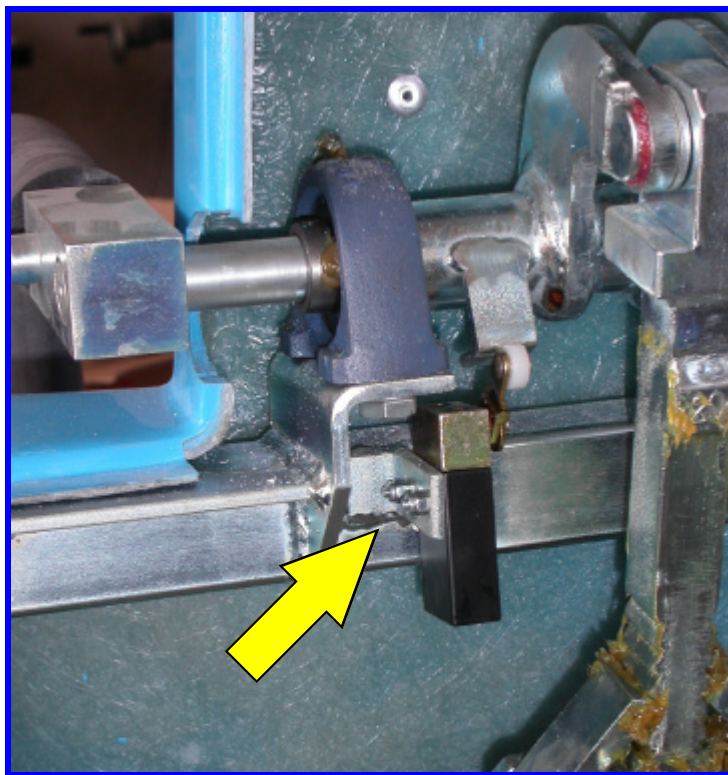

- Loose the fixing screws of the limit switch
- Move the limit switch until the lever activate the contact (check the signal lamp on the operator console).
- Tight The fixing screws